

Hydromist 35 User Guide



THIS USER GUIDE SHOULD ALWAYS BE USED IN CONJUNCTION WITH THE USER MANUAL

1. Preparing the machine



Fill the fresh water solution tank with mixed water and approved cleaning chemical according to the chemical manufacturer's instructions.


2. Using the machine




Fully unwind the supply cord and plug in to a convenient socket outlet.



To lower the floating brush, press the foot pedal.

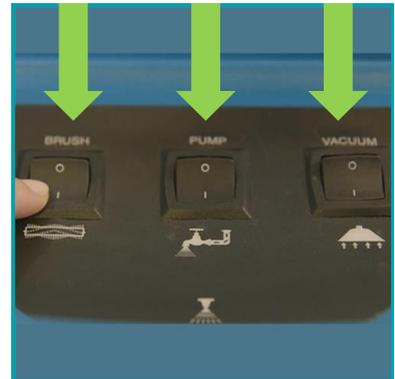

Switch on the vacuum motor, pump and brush switches.

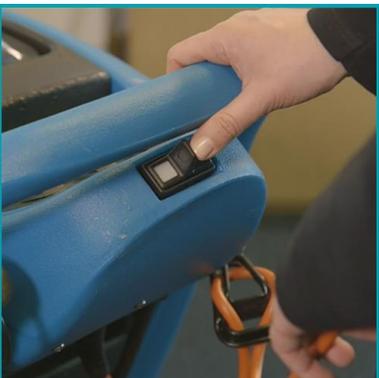

Press and hold the solution switch to apply the cleaning solution, whilst pulling the machine slowly backwards to clean the carpet.



Stop spraying the cleaning solution about 30cm before the end of the cleaning pass to ensure all solution is vacuumed up.



Wheel the machine forward and repeat, slightly overlapping the previous pass. Do not clean any area more than twice, or overwetting could result in carpets shrinking.



After a few passes, check the waste tank to see that no foam is present. Add extra defoamer if necessary.



Make sure to empty the recovery tank when it is approximately $\frac{3}{4}$ full. Do not refill the solution tank without emptying all the contents of the recovery tank first.



When solution spray ceases the solution tank is empty. Switch off the machine, empty the recovery tank and refill the solution tank.

3. Using the optional upholstery tools




There is an optional upholstery kit and stair cleaning attachment available.




If using these accessories, connect the vacuum and solution hose to the front of the machine.



Attach the upholstery tool to both the vacuum and solution hose on the other end.

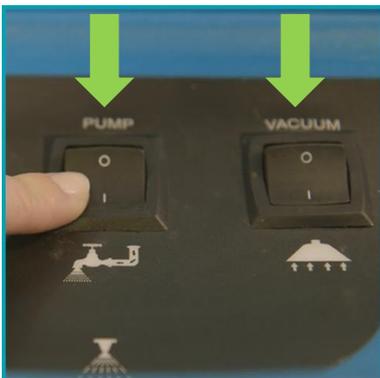


Switch on the vacuum motor and pump switch.

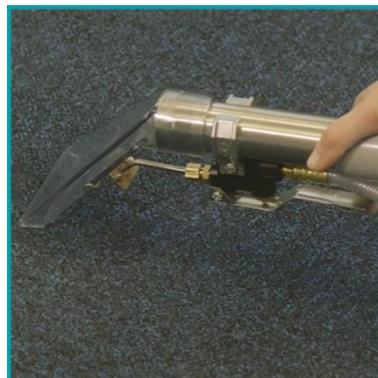


Operate the spray lever on the handle to dispense the cleaning solution whilst pulling the upholstery tool or wand backwards.

4. After use and storage

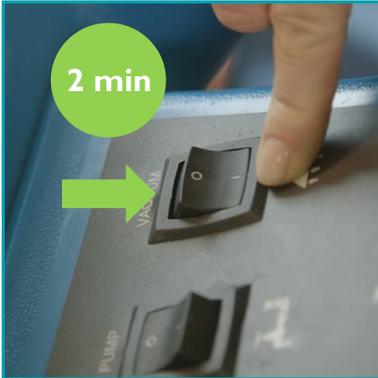


After use, run the vacuum motor for approximately 2 minutes.

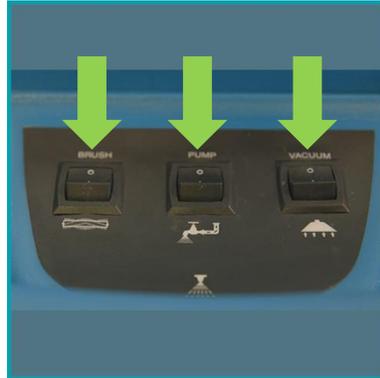

Ensure all switches are in the OFF position.



To drain the recovery tank, release the drain hose at the rear of the machine and empty into a bucket. Rinse out the tank with clean water to remove dirt and sediment.

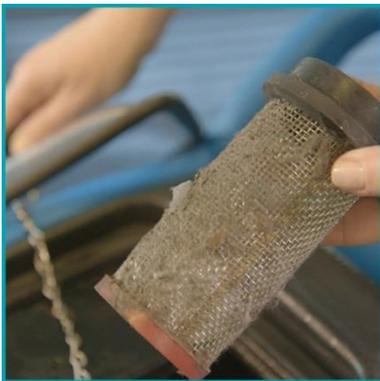

Regularly check the filter by removing and rinsing out any dirt or debris.



To drain the solution tank: connect the drain hose to the solution fitting at the front of the machine and direct the free end into a bucket.




Turn on the PUMP switch. This will pump out any remaining solution.



Add approx. ½ litre of clean water to solution tank to flush out the tank and pump. Once draining is finished, remove the drain hose.



Switch OFF all switches and unplug the machine.

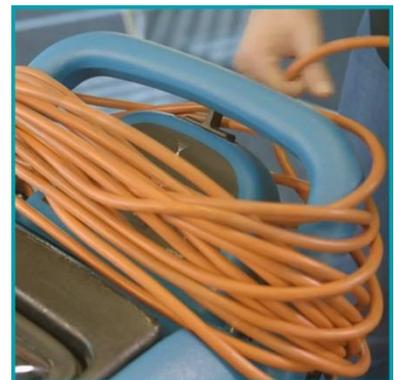

Wrap supply cord around handle ensuring that plug is not trailing on the floor.



With both water tanks empty the machine may be tilted backwards to rest on the handle to facilitate cleaning. Wipe down the machine, including the underside of the machine.



Check the vacuum and brush for debris. The brush should be raised for storage.



Store the machine with the recovery tank lid removed and store in a dry indoor area only.