

Hydromist Lite User Guide




THIS USER GUIDE SHOULD ALWAYS BE USED IN CONJUNCTION WITH THE USER MANUAL

1. Preparing the machine



Connect the vacuum hose onto the vacuum hose inlet and the high pressure spray hose onto the solution outlet.

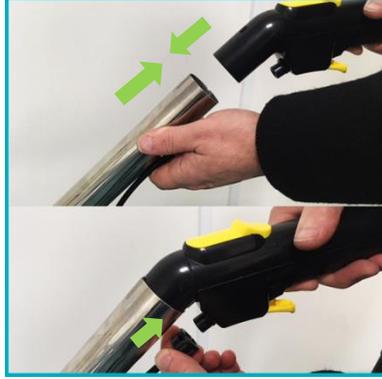

Connect the vacuum hose and the high pressure spray hose to the carpet cleaning wand or upholstery tool.



Fill the solution tank with mixed water and approved cleaning chemical according to the chemical manufacturer's instructions.

2. Using the machine



Fully unwind the supply cord and plug in to a convenient socket outlet.



Ensure the slider on top of the trigger unit is in the closed position.




Switch on the pump spray and/or vacuum.



Press and hold the solution trigger to apply the cleaning solution, whilst pulling the wand or tool slowly backwards to clean the carpet or upholstery.



Move the wand backwards and repeat, slightly overlapping the previous pass. Do not clean any area more than twice, or overwetting could result in carpets and upholstery shrinking.

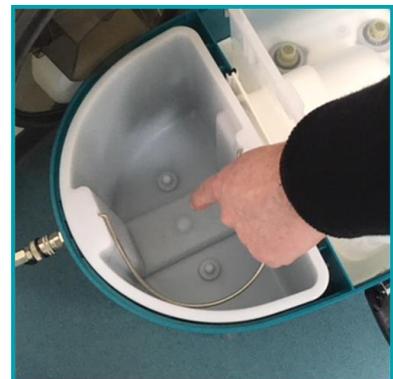

After a few passes, check the waste tank to see that no foam is present. Add extra defoamer if necessary.



Make sure to empty the recovery tank when it is approximately $\frac{3}{4}$ full. Do not refill the solution tank without emptying all the contents of the recovery tank first.



When solution spray ceases the solution tank is empty. Switch off the machine, empty the recovery tank and refill the solution tank.

3. After use and storage




Ensure all switches are off.




Empty the solution tank, rinse and replace onto the machine.



Add approx. $\frac{1}{2}$ litre of clean water to solution tank to flush out the tank and pump.

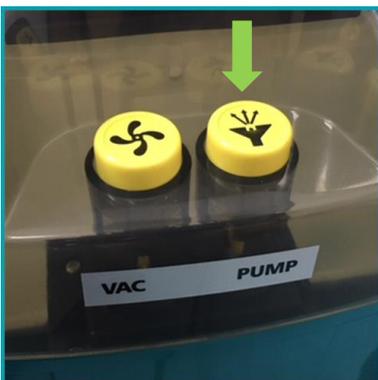

Turn on the PUMP switch. This will pump out any remaining solution.

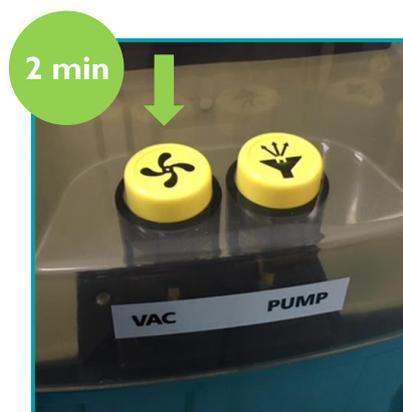

After use, run the vacuum motor for approximately 2 minutes.



Empty and rinse both the solution and recovery tanks.



Switch OFF all switches and unplug the machine.



Wrap the supply cord around the handle ensuring that the plug is not trailing on the floor.



Check the carpet cleaning wand or upholstery tool for any debris, and rinse.



Store the machine in a dry indoor area only.