


Valet Battery Upright User Guide

 THIS USER GUIDE SHOULD ALWAYS BE USED IN CONJUNCTION WITH THE USER MANUAL

I. Assembling the machine

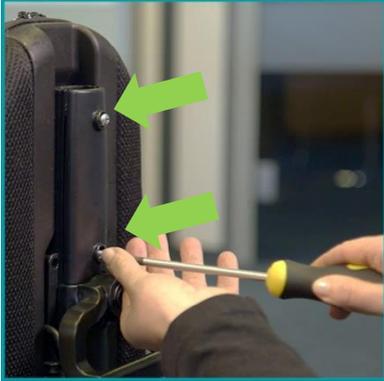

Remove the handle bracket by removing the two screws.



Place the handle onto the back of the vacuum, aligning the holes.



Place the handle bracket back into position and secure the two screws.




Unzip the bag compartment and check the vacuum bag is fitted.


2. Charging the battery



When the machine arrives, place the machine on full charge for first use. This will take approximately 2.5 hours.

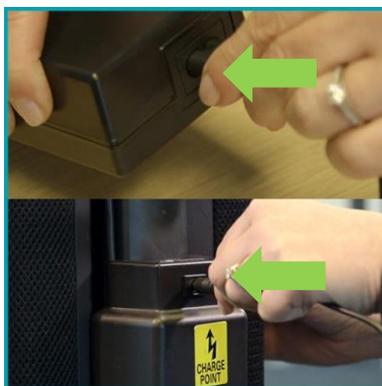

To charge the battery plug the AC cable into the charger and plug the DC cable into the charge point on the battery.

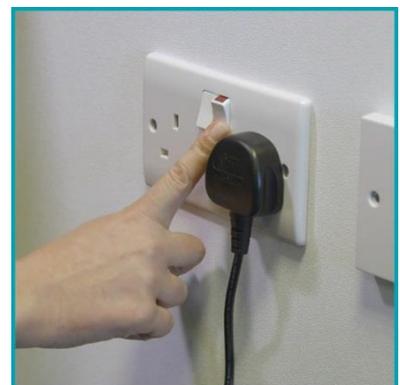

Then plug into the wall socket.



The charger LED light will be red during charging and will turn green when the battery pack is fully charged.



Always unplug the charger from the charger point before using the vacuum.



The battery life display is situated at the back of the machine. Press the button on the battery to illuminate the LED lights.

3. Using the machine



To recline the vacuum press the handle release pedal located on the back of the vacuum with your foot to recline the handle.



To start the machine, press the power button on the handle and start vacuuming.




The vacuum is designed with an automatic self-adjusting nozzle that allows the nozzle to float evenly over all flooring surfaces and will adjust automatically to the floor surface. No manual adjustments are required.



For maximum edge cleaning, place the left side of the nozzle, from the user's perspective, against the wall or stationary furniture to use the edge cleaning feature.




To replace the vacuum bag, ensure the machine is switched off and unplug from the charger.

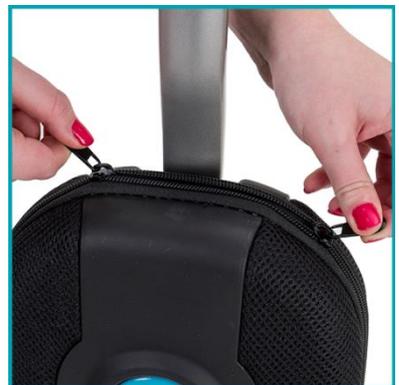

Unzip the bag compartment.



Remove the used vacuum bag by pulling the green bag collar tab away from the vacuum.

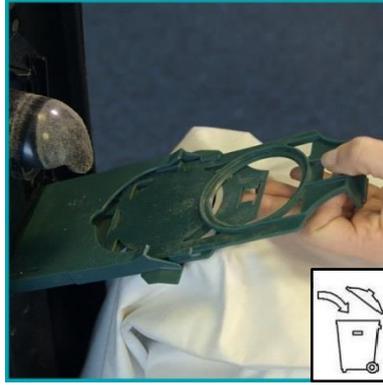

Slide the used bag out of the bag holder which automatically seals the bag opening and discard the used bag.



To install a new bag, slide the bottom of the green bag collar into the bag holder until it snaps into position. Push the top of the bag collar upward until the collar snaps into place on the vacuum.



Tuck the bag corners into the bag compartment then zip the bag compartment closed.

4. After use and storage



Ensure the machine is switched off.



After every use check the battery cable for any wear or damage, check the dust bag and if full replace. Check the battery charge status and charge if required.



Store the machine in a dry indoor area only.