

Upgrade VBU to VBUII User Guide

Latch Kit: 05-4759-000



THIS USER GUIDE SHOULD ALWAYS BE USED IN CONJUNCTION WITH THE USER MANUAL



Firstly, ensure that the machine is switched off.



Unzip and open the bag compartment.



Remove the used vacuum bag by pulling the green bag collar tab away from the vacuum.



Slide the bag out of the bag holder which automatically seals the bag opening and place to one side.




Lay the machine on the floor and undo the 4 screws surrounding the vacuum bag holder using a cross-head screwdriver.



Remove the vacuum bag holder.



Remove the rubber gasket.

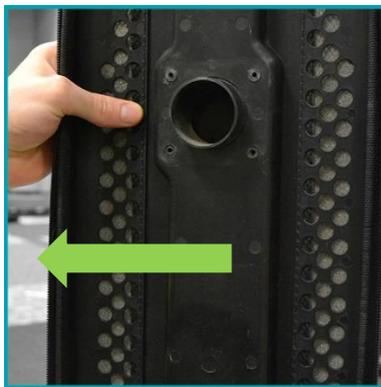

Remove the bag compartment.



Please note that the battery clamp is currently positioned beneath the lug on the handle duct.




Unscrew the 2 screws in the battery clamp.



Remove the battery and battery clamp.



Please note that the battery clamp is not symmetrical.

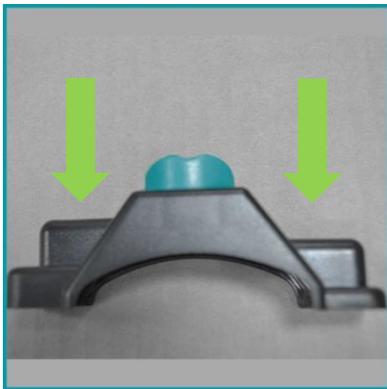


Please note that the latch is also not symmetrical.




The battery clamp will be positioned between (1) and (2) when assembled.



Hold the latch against the reverse side of the handle duct. Note latch orientation.

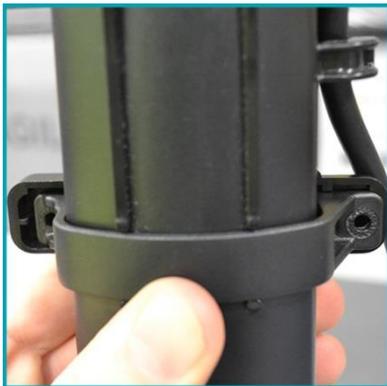

Hold the battery clamp to the handle duct without releasing the latch.

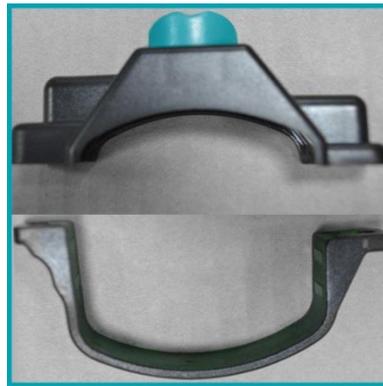

Ensure that the latch and the battery clamp are aligned correctly as shown.




Secure the battery clamp to the latch by screwing the 2 screws.



Lay the vacuum on its back and fit the bag compartment (1) onto the machine then replace the rubber gasket (2) so that the screw holes are aligned.



Replace the dust bag holder.

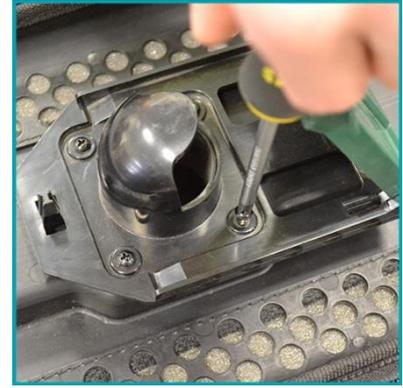

Secure the 4 screws surrounding the vacuum bag holder.



Return the machine to an upright position and slot on the open dust bag. Then Zip up the bag compartment.



Attach the battery to the machine as shown so that the latch makes a "Click" noise.
The battery is now removable.